

Ceiling PIR Detector (311)

The 311 Ceiling PIR Detector is a compact unit that provides energy-saving functions in a DALI system. It contains these sensors:

- Passive infrared detector (PIR)
- Infrared receiver

As a presence detector, the unit can turn the lights on when a room is occupied, and off when the room is unoccupied.

The 311 is fully compatible with Helvar's lighting system design and control software: Designer, and Toolbox.




freedom in lighting



Key Features

- The PIR sensor detects movement within detection range, allowing load control in response to changes in room occupancy.
- IP55 and cold environment (-30 °C) versions available. Order codes:
 - 311P: IP55 version;
 - $\circ~$ 311M: IP55 and –30 °C version.
- Status LEDs flash red to indicate the following:



Installation


All versions of the Detector can be mounted into a ceiling or wall void, or onto a solid surface using a back box.

The standard version (311) can be mounted onto Helvar's SBB-A back box, whereas the 311P and 311M versions need to be mounted onto Helvar's fully sealed SBB-P back box to maintain the IP rating.

When mounting the 311P and 311M versions, the supplied silicone gasket must always be used.

For information on how to install the Ceiling PIR Detector, see the *Installation Guide*.

Detection Pattern

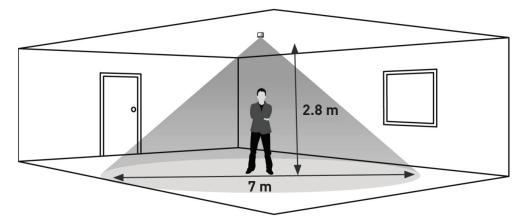



freedom in lighting

Technical Data

Connections

External power / DALI:

Cable rating:

Power

DALI supply input: DALI consumption:

Sensors

Presence detector:

Infrared receiver:

Mechanical data

Bezel diameter:

Finish / Colour:

Weight:

IP code:

Material (casing):

Mounting hole diameter:

Removable connector block: Wire size: 0.5 mm² – 1.5 mm² solid or stranded All cables must be mains rated. Max. length: 300 m @ 1.5 mm²

13 V to 22.5 V 15 mA

68 mm

76 mm

58 g

311: IP40 311P*: IP55 311M*: IP55

Flame-retardant ABS


Matt / White RAL 9003

* Only when the supplied gasket is used and the unit is


mounted onto Helvar's SBB-P back box or flush in a ceiling.


PIR: Passive infrared presence detector For remote control commands. Note: Adjust sensitivity using Designer or Toolbox (not by remote control unit).

Connections

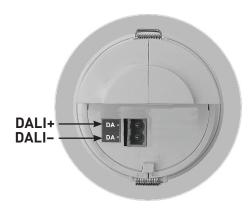

Dimensions (mm)

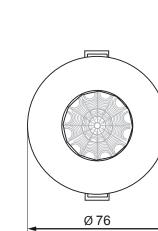

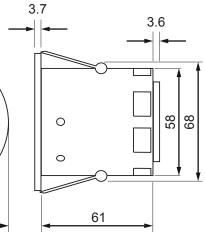

Operating conditions

| Ambient temperature: | 311 & 311P: 0 °C to +35 °C 311M: -30 °C to +35 °C Note: The temperature difference between the detection target and the background must be at least 4 °C. |
|----------------------|--|
| Relative humidity: | Max. 90 %, noncondensing |
| Storage temperature: | 311 & 311P: -10 °C to +70 °C 311M: -30 °C to +70 °C |

Conformity and standards

| EMC emission: | EN 61000-6-1 |
|---------------|---|
| EMC immunity: | EN 61000-6-3 |
| Safety: | EN 60730-1 |
| Environment: | Complies with WEEE and RoHS directives. |

2

Version information

| Software version: | 6.08 |
|-------------------|------|
| Hardware version: | Rev. |

Helvar 311 Ceiling PIR Detector: Datasheet